



Landing Gear and Nose Wheel Steering Parts

FAA-PMA Approved

Aircraft	Serial Number	Main Wheel Kit 2 kits req. if not labeled Left/Right	Nose Wheel Kit
PA-23, PA23-160	All	PTL-KT-91	PTL-KT-91
PA-23-235	All	PTL-KT-92 w/o Notched Bushings PTL-KT-93 w/Notched Bushings	PTL-KT-92 w/o Notched Bushings PTL-KT-93 w/Notched Bushings
PA-23-250	All	PTL-KT-92 w/o Notched Bushings PTL-KT-93 w/Notched Bushings	PTL-KT-92 w/o Notched Bushings PTL-KT-93 w/Notched Bushings
PA-E23-250	All	PTL-KT-92 w/o Notched Bushings PTL-KT-93 w/Notched Bushings	PTL-KT-92 w/o Notched Bushings PTL-KT-93 w/Notched Bushings
PA-24, PA-24-250, PA-24-260, PA-24-400	All	PTL-KT-36 Left PTL-KT-75 Right	PTL-KT-95
PA-28-140, PA-28-150, PA-28-160, PA-28-180	All	PTL-KT-11	PTL-KT-31
PA-28-151	All	PTL-KT-13	PTL-KT-29
PA-28-161	2816001 thru 2816119	PTL-KT-4	PTL-KT-31
	2841001 thru 2841365	PTL-KT-10	PTL-KT-26
	2842001 thru 2842999	PTL-KT-5	PTL-KT-32
	28-7716001 thru 28-7816253	PTL-KT-15	
	28-7816254 thru 28-8616057	PTL-KT-4	PTL-KT-31
PA-28-181	2843001 thru 2843999	PTL-KT-3	PTL-KT-30
	28-7690001 thru 28-7890231	PTL-KT-12	PTL-KT-27
	28-7890232 thru 28-8690062	PTL-KT-7	
PA-28-201T	All	PTL-KT-2	PTL-KT-52
PA-28-235	All	PTL-KT-11	PTL-KT-31
PA-28-236	All	PTL-KT-77	PTL-KT-28
PA-28R-180	28R-30005 thru 28R-30481	PTL-KT-40 Left PTL-KT-59 Right	PTL-KT-79
	28R-7130001 thru 28R-7130013	PTL-KT-40 Left PTL-KT-59 Right	PTL-KT-81
PA-28R-200	28R-35001 thru 28R-7135062	PTL-KT-40 Left PTL-KT-59 Right	PTL-KT-78
	28R-7135063 thru 28R-7635545	PTL-KT-40 Left PTL-KT-59 Right	PTL-KT-81
PA-28R-201, PA-28R-201T	2803001 thru 2837061	PTL-KT-44 Left PTL-KT-61 Right	PTL-KT-84
PA-28R-201	2844001 thru 2844999	PTL-KT-39 Left PTL-KT-68 Right	PTL-KT-80
PA-28R-201, PA-28R-201T	28R-7703001 thru 28R-7837317	PTL-KT-44 Left PTL-KT-61 Right	PTL-KT-84
PA-28RT-201, PA-28RT-201T	All	PTL-KT-43 Left PTL-KT-61 Right	PTL-KT-85
PA-30	All	PTL-KT-95	PTL-KT-95
PA-31, PA-31-300, PA-31-325	31-5 thru 31-7812120	PTL-KT-22 w/o Notched Bushings PTL-KT-21 w/Notched Bushings	PTL-KT-90 w/o Notched Bushings PTL-KT-98 w/Notched Bushings
	31-7812121 thru 31-8312019		PTL-KT-97 w/Notched Bushings PTL-KT-56 w/o Notched Bushings
PA-31-350	31-5001 thru 31-8553002	PTL-KT-25 w/o Notched Bushings PTL-KT-18 w/Notched Bushings	PTL-KT-67 w/o Notched Bushings PTL-KT-73 w/Notched Bushings
PA-31-350 (T1020)	31-8253001 thru 31-8553002	PTL-KT-24 w/o Notched Bushings PTL-KT-17 w/Notched Bushings	PTL-KT-70 w/o Notched Bushings PTL-KT-64 w/Notched Bushings
PA-31P	All	PTL-KT-25 w/o Notched Bushings PTL-KT-18 w/Notched Bushings	PTL-KT-65 w/o Notched Bushings PTL-KT-72 w/Notched Bushings
PA-31P-350	All	PTL-KT-25 w/o Notched Bushings PTL-KT-18 w/Notched Bushings	PTL-KT-65 w/o Notched Bushings PTL-KT-71 w/Notched Bushings
PA-31T, PA-31T1, PA-31T2, PA-31T3	All	PTL-KT-23 w/o Notched Bushings PTL-KT-16 w/Notched Bushings	PTL-KT-65 w/o Notched Bushings PTL-KT-71 w/Notched Bushings
PA-32-260	32-1 thru 32-7700023	PTL-KT-14	
	32-7800001 thru 32-7800008	PTL-KT-9	PTL-KT-33
	32-40000 thru 32-7840043	PTL-KT-14	
PA-32-300	32-7840044 thru 32-7940290	PTL-KT-9	PTL-KT-33
PA-32-301, PA-32-301T	All	PTL-KT-8	PTL-KT-34
PA-32-301FT, PA-32-301XTC	All	PTL-KT-6	PTL-KT-35
PA-32R-300	All	PTL-KT-37 Left	PTL-KT-82
		PTL-KT-69 Right	
PA-32R-301, PA-32R-301T	3213001 thru 3229003	PTL-KT-42 Left	PTL-KT-84
		PTL-KT-60 Right	
	3246001 thru 3257999	PTL-KT-45 Left	PTL-KT-85
		PTL-KT-63 Right	
	32R-8013001 thru 32R-8629008	PTL-KT-42 Left	PTL-KT-84
PTL-KT-60 Right			
PA-32RT-300, PA-32RT-300T	All	PTL-KT-41 Left PTL-KT-60 Right	PTL-KT-83
PA-34-200	All	PTL-KT-42 Left PTL-KT-60 Right	PTL-KT-86
PA-34-200T	All	PTL-KT-38 Left PTL-KT-58 Right	PTL-KT-86
PA-34-220T	3433001 thru 3447029	PTL-KT-57	PTL-KT-86
	3448038 thru 3448079	PTL-KT-57	PTL-KT-86
	3449001 thru 34-8633031	PTL-KT-57	PTL-KT-86
PA-38-112	All		PTL-KT-1
PA-39	All	PTL-KT-95	PTL-KT-95
PA-42, PA-42-720, PA-42-720R	All	PTL-KT-20 w/o Notched Bushings PTL-KT-25 w/Notched Bushings	PTL-KT-65 w/o Notched Bushings PTL-KT-71 w/Notched Bushings
PA-42-1000	All	PTL-KT-19	PTL-KT-65 w/o Notched Bushings PTL-KT-71 w/Notched Bushings
PA-44-180	4495001 thru 4495013	PTL-KT-44 Left	PTL-KT-85
	4496001 thru 4496999	PTL-KT-61 Right	PTL-KT-74
	44-7995001 thru 44-8195026		PTL-KT-85
PA-44-180T	All	PTL-KT-43 Left PTL-KT-62 Right	PTL-KT-85
PA-46-310P	All	PTL-KT-48	PTL-KT-96
PA-46-350P (w/ G1000)	All	PTL-KT-47	PTL-KT-88
PA-46-350P (w/o G1000)	4622001 thru 4622200	PTL-KT-46	PTL-KT-96
	4636001 thru 4636195	PTL-KT-51	
	4636196 thru 4636999	PTL-KT-50	PTL-KT-88
PA-46-500TP (w/ G1000)	All	PTL-KT-54	PTL-KT-87
PA-46-500TP (w/o G1000)	All	PTL-KT-55	PTL-KT-87
PA-46R-350T (w/ G1000)	All	PTL-KT-50	PTL-KT-89
PA-46R-350T (w/o G1000)	All	PTL-KT-50	PTL-KT-88