

"AIRFLOW ENHANCEMENT KIT"

INSTALLATION INSTRUCTIONS

I. FUSELAGE

- A. Remove an Inspection Cover Plate or Inspection Access Door on the aft fuselage, (if there is no inspection cover, the installer must cut a 4" diameter round hole in the cover, plate, or panel to allow B below),**
- B. Install the Fuselage Vent Assembly, with the louver openings pointed to the tail in the inspection cover, plate, or panel,**
- C. Install the inspection cover, plate, or panel with the Fuselage Vent Assembly on the fuselage.**

II CABIN

- A. In the Cabin, remove the rear baggage panel (or shelf) where the Cabin Vent(s) will be installed.**
- B. Cut Out two round 4" diameter openings in the rear baggage panel (shelf) to install the Cabin Vent(s),**
- C. Reinstall the panel (or shelf).**

**** You may desire to rotate the louvers slightly, approximately 15 to 20o up at the forward side of the assembly to retard water entry on tricycle geared aircraft.**

AckInstructionsR4.doc/8/6/02