



While holding PROLOCK with decal in legible position, insert key, turn clockwise, and pull.

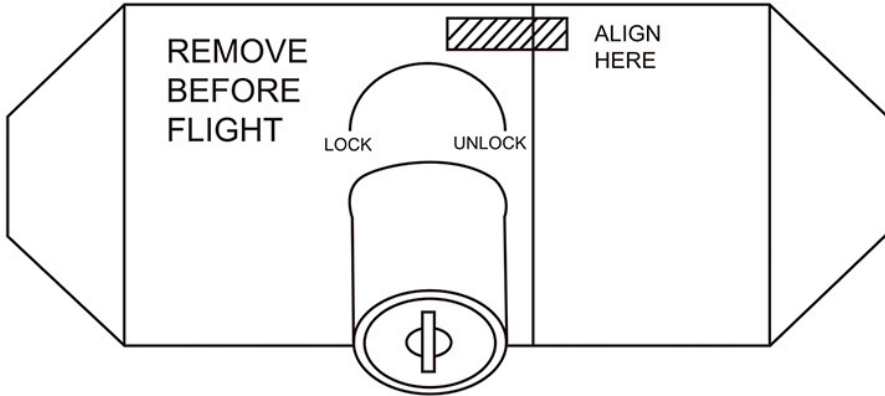


Lock will come out and stop.

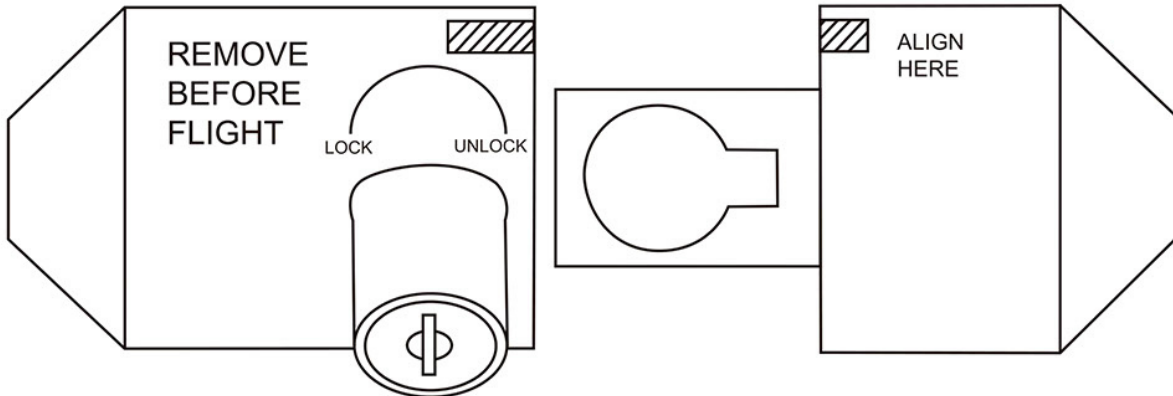

Separate male and female chrome ends.

CAUTION
Do not remove lock assembly! Should lock assemble be removed inadvertently, reinstall before mating chrome ends.

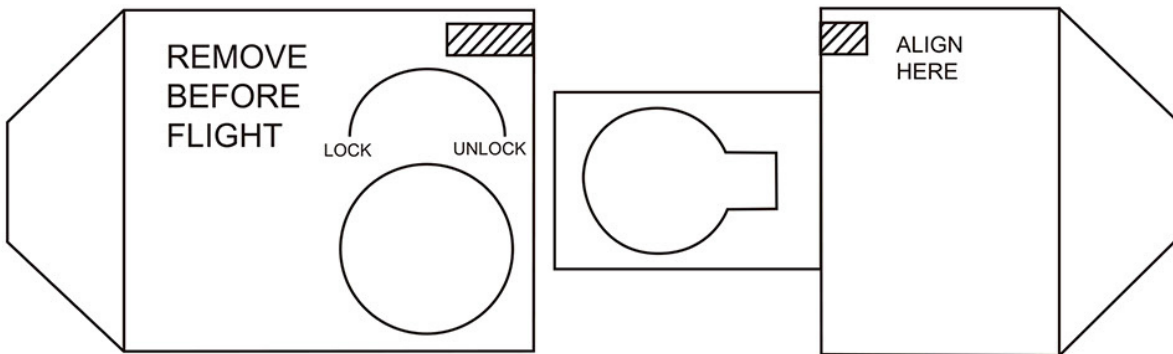

To lock, reverse above process after matching alignment symbol.
Be sure to remove key.



DO NOT REMOVE !!